

JBC

www.jbctools.com

Product
website



INSTRUCTION MANUAL



SF

Automatic Solder-Wire Feeder Station

This manual corresponds to the following references:

SF-110VB (110-120V) with Guide Kit ø1mm

SF-210VB (230V) with Guide Kit ø1mm

Packing List

The following items are included:




**Automatic Solder-Wire
Feeder Control Unit** 1 unit



**Auto Solder-Wire
Handle** 1 unit
Ref. SF280



Guide Kit 1 unit
Ref. GSF10V-B
already assembled

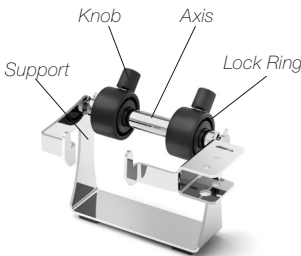

Reel Support 1 unit
Ref. 0018624

includes:

Ref. 0019301 (x1) - Support
0018033 (x1) - Axis
0003412 (x2) - Lock Ring
0014427 (x2) - Knob



Key Set for SF 1 unit
Ref. 0019341

includes:

Ref. 0012574 (x1) - Allen key Ø 2.5
0017631 (x1) - Spanner
0741610 (x1) - Allen key Ø 1.5



Power cable 1 unit
Ref. 0023715 (100V/120V)
0023714 (230V)



Manual 1 unit
Ref. 0028008

Features and Connections

Automatic Solder-Wire Feeder Control Unit

SF280 Automatic Solder-Wire Handle




Tool Assembly

Connect the tool to the control unit following this steps:

Insert and push the guide nozzle until the end (1) and tighten the screw (2).

Connect the jack (3).

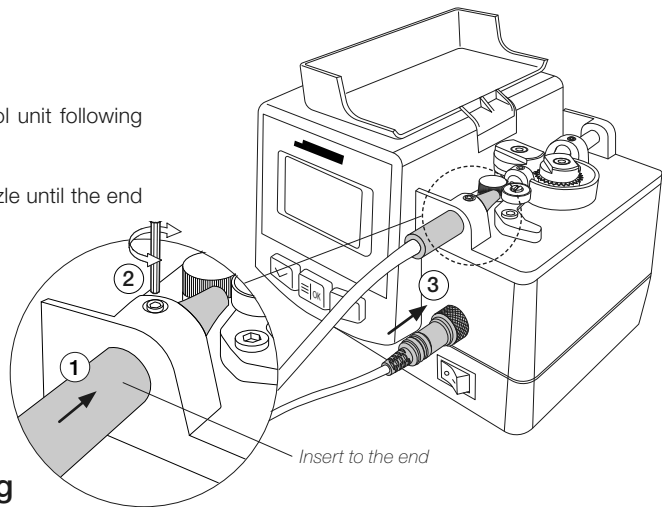


Solder-Wire Loading



Put the solder reel into its support (1).

Introduce the solder wire into the inlet nozzle (2) until it reaches the wheels (3).

Use the *Tin Reload Process* in the *Main Menu* (4).

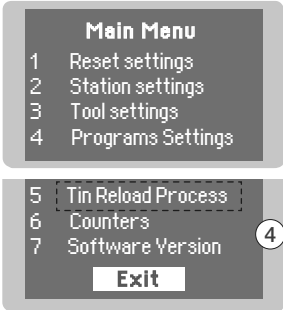

The Reload Process screen opens. Press  to start the process.

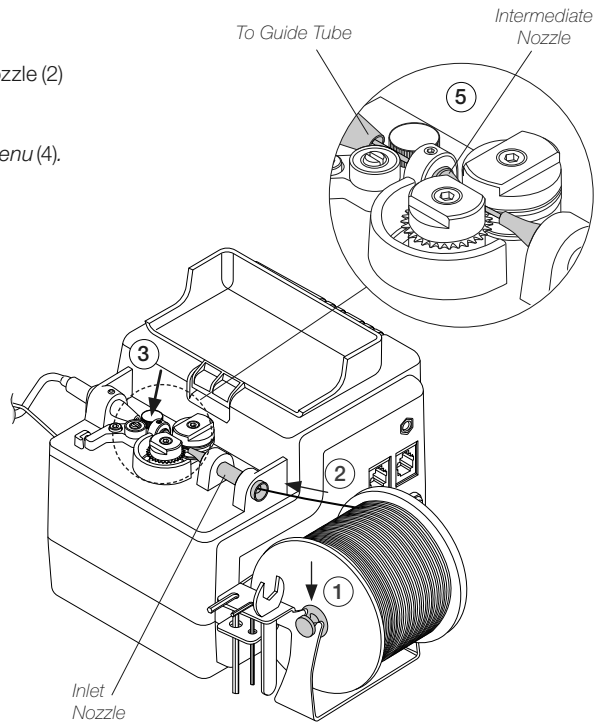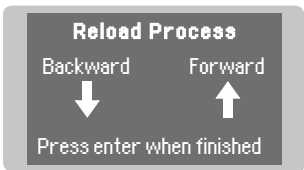

Make sure the wire passes through the Intermediate Nozzle and enters into the Guide Tube (5).


Solder-Wire Unloading

With Solder Wire Perforation

To unload solder wire with perforation that has already passed through the guide tube, cut the wire between the solder reel and the inlet nozzle (1).

To extract the wire out of the tube, hold the tool on your hand and press  until the wire stops moving forward.

Grasp the wire coming out of the outlet nozzle with a pliers and pull from it until it is completely out.

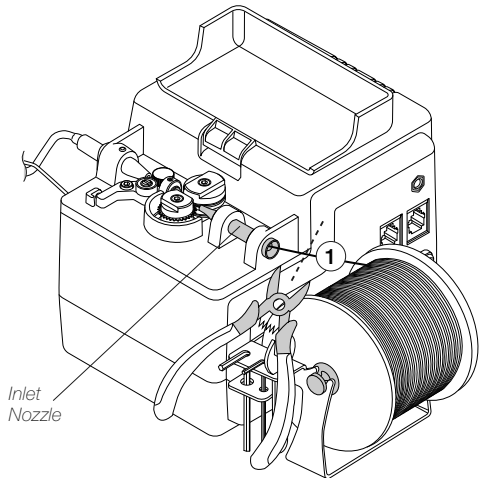

With Solder Wire Perforation

When using a guide kit without solder wire perforation, press  until the wire is completely wound on the solder reel to unload the solder wire. It is best to rotate the reel by hand as the wire is being pulled back in order to keep it neatly arranged on the reel.

Or, If preferred, proceed as described before for perforated solder wire unloading.

Changing Guide Kits

Changing Wheels and Blade

For this operation, disconnect the device from the mains. Disconnect the tool from the control unit and open its cover.

Use the Allen key and the spanner, provided with the station. First disassemble the guide tube (6), the support and traction wheels, or the guide wheel, the blade and its clamp (4)+(5). Then, disassemble the nozzles (2)+(3). Disassemble the counter wheel (1).

Assembly with Solder Wire Perforation:

Assemble the counter wheel (1).


Insert the intermediate nozzle (2) until its collar rests against the housing and tighten the screw.

Assemble the inlet nozzle (3).

Assemble the guide wheel* (4) and tighten the screw.

Assemble the blade first, then mount the blade clamp (5) onto the same axis and tighten the screw. **Caution:** handle the blade carefully to avoid injury.

Insert the guide set (6).

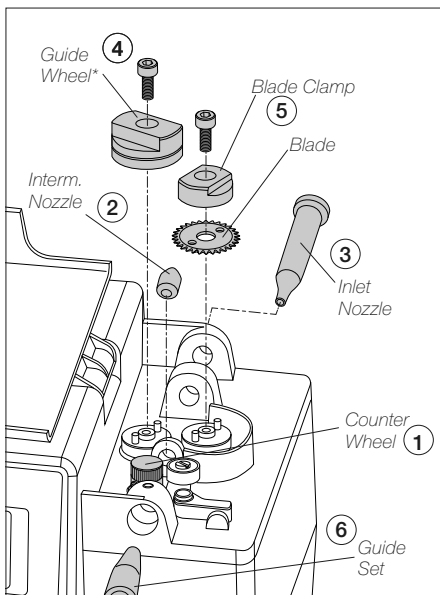

Assembly without Solder Wire Perforation:

Assemble the counter wheel (1).


Insert the intermediate nozzle (2) until its collar rests against the housing and tighten the screw.

Assemble the inlet nozzle (3).

Assemble the support wheel* (4) onto the axis and tighten the screw.

Assemble the traction wheel (5) and tighten the screw.

Insert the guide set (6).

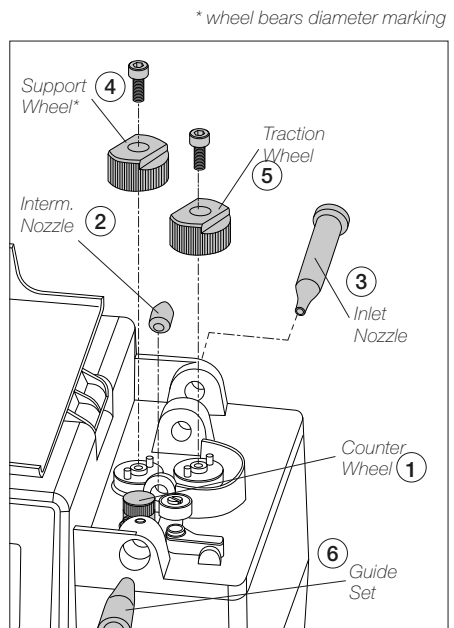

Outlet Nozzle Replacement

Flux can cause clogging at the outlet nozzle of the guide tube set and it can be necessary to replace the worn or clogged outlet nozzle.

 
Note: There is a nozzle size for each soldering wire diameter. The use of the nozzle is necessary as its inner diameter is adjusted to the solder wire diameter and guides the wire with greater precision.

To replace the outlet nozzle, follow these steps:


First, unload any remaining solder wire that might still be inside the guide tube (see page 5) and then unplug the tool. Unscrew the spring inwards (2), following the downward direction of the spring.



Once the outlet nozzle is released from the spring, pull the outlet nozzle out (2) and then remove the spring (3).




 Place the new outlet nozzle onto the guide tube set (4) and then screw back the spring onto it to fix the outlet nozzle onto the guide tube (5).



Guide Tube Replacement

To replace the guide tube, follow the outlet replacement steps until reaching no. 3. Once both the outlet nozzle and the spring are removed, open the guide clamp knob (6) and remove the guide tube (7).

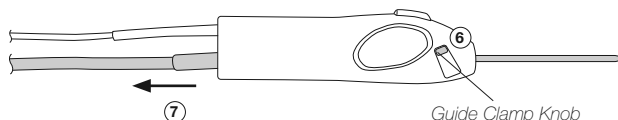

Insert the new guide tube into the tool, close the guide clamp knob to fix it in place and follow steps 4 and 5 to fix the outlet nozzle.

Enter "Tool Settings" at the SF control unit main menu and select the proper wire diameter to complete the process.



Control Process

Work Screen


Choose between continuous, discontinuous and program mode:



Program Mode

With the SF you can define up to 35 dynamic programs. In each one you can configure up to 3 steps with different wire length and dispensing speed.

Execute them sequentially and cyclically with the 'Edit Concatenation List' option.

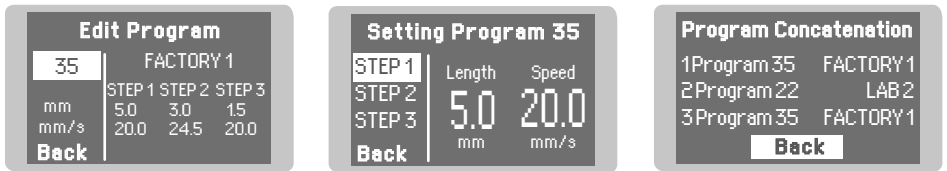


Troubleshooting

Station troubleshooting available on the product page on www.jbctools.com.

Control Process

Menu Screen

Default PIN: 0105

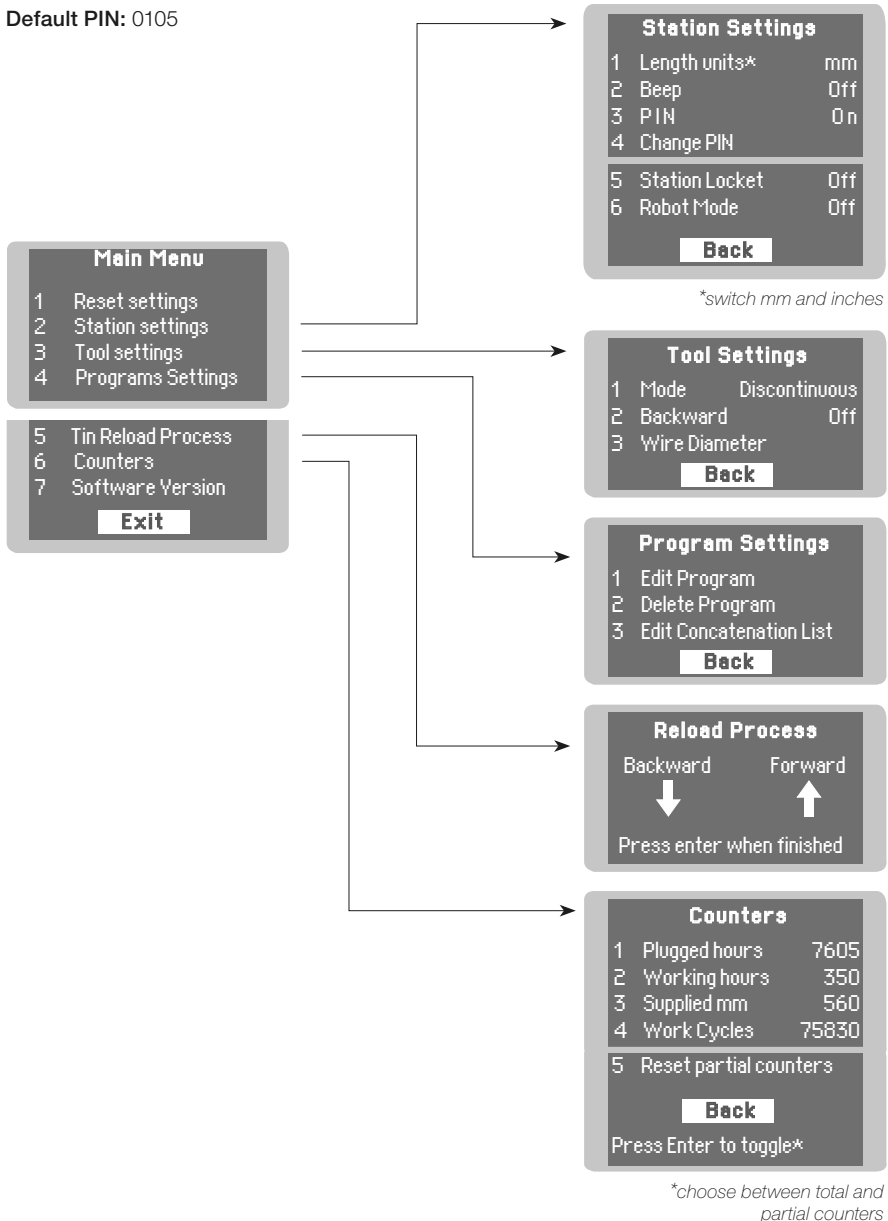

Accessories

Guide Kits

Various guide kits are available to choose from depending on the diameter of the welding wire used.



Solder Wire Ø	Ref. with Solder Wire Perforation	Solder Wire Ø	Ref. without Solder Wire Perforation
-	-	0.38 - 0.40 mm / 0.015 - 0.016 in	GSF04D-B
-	-	0.46 - 0.56 mm / 0.018 - 0.022 in	GSF05D-B
-	-	0.60 - 0.64 mm / 0.023 - 0.025 in	GSF06D-B
-	-	0.70 - 0.78 mm / 0.028 - 0.031 in	GSF07D-B
0.8 mm / 0.032 in	GSF08V-B	0.80 - 0.82 mm / 0.032 - 0.033 in	GSF08D-B
1.0 mm / 0.040 in	GSF10V-B	0.90 - 1.10 mm / 0.036 - 0.044 in	GSF10D-B
1.2 mm / 0.047 in	GSF12V-B	1.14 - 1.27 mm / 0.045 - 0.051 in	GSF12D-B
1.5 mm / 0.059 in	GSF15V-B	1.50 - 1.57 mm / 0.060 - 0.063 in	GSF15D-B
1.6 mm / 0.063 in	GSF16V-B	1.60 - 1.63 mm / 0.063 - 0.065 in	GSF16D-B
-	-	1.80 mm / 0.073 in	GSF18D-B

Tool Stand

Stand for SF280 Auto Solder-Wire Handle

Ref. SF-SE

It allows leaving the tool on a support when not in use and has a cable collector to keep the work space tidy.




Accessories

GSF Guide Kit for SF280
with Solder-Wire Perforation

GSFXXV-B WITH SOLDER WIRE PERFORATION

XX	Wire diameter	
	Diameter of use	
08	Ø 0.8 mm	Ø 0.032 in
10	Ø 1.0 mm	Ø 0.040 in
12	Ø 1.2 mm	Ø 0.047 in
15	Ø 1.5 mm	Ø 0.059 in
16	Ø 1.6 mm	Ø 0.063 in

GSF08X-B	Guide tube
GSF10X-B	0018630
GSF12X-B	0019188
GSF15X-B	0026113
GSF16X-B	0019169
	0026115

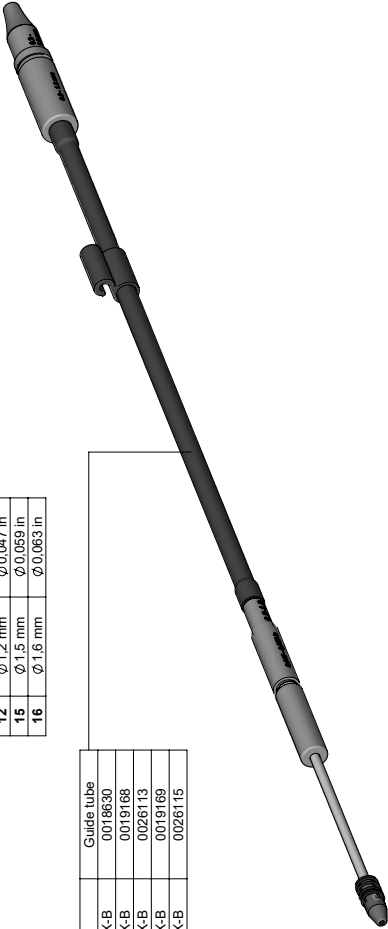


SPARE PARTS

Wire Ø	Outlet nozzle	Nozzle	Guide wheel	Blade	Blade clamp	Inlet nozzle	Interm. nozzle	Counter Wheel	Screws	Threaded screw
GSF08V-B	0025270	0030913	0021696	0021555	0018638	0018632	0024955	0026693		
GSF10V-B	0021560		0021699			0019170	0024956			
GSF12V-B	0025272		0023738			0019171	0024957			
GSF15V-B	0025274		0019696			0024233	0024958			
GSF16V-B	0025276		0025922				0024959			
								0026694	0026695 (x2)	0026696 (x3)

Accessories

GSF Guide Kit for SF280
without Solder-Wire Perforation

GSFXXD-B WITHOUT SOLDER WIRE PERFORATION

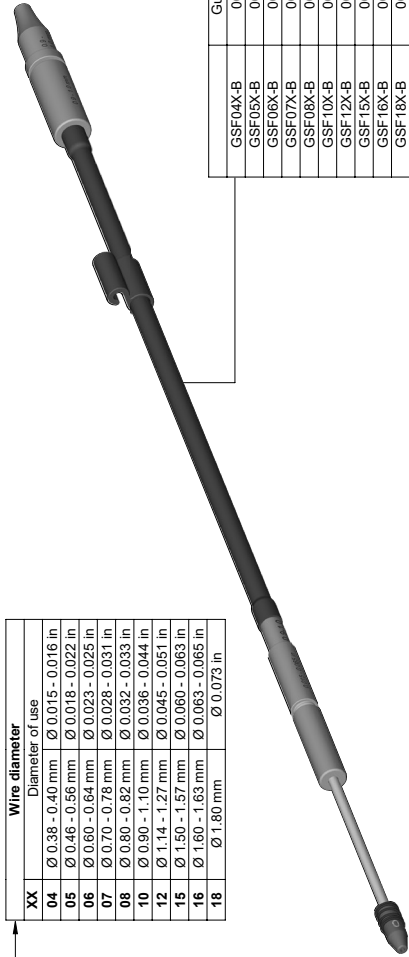

xx	Wire diameter	
	Diameter of use	
04	Ø 0.38 - 0.40 mm	Ø 0.015 - 0.016 in
05	Ø 0.46 - 0.56 mm	Ø 0.018 - 0.022 in
06	Ø 0.60 - 0.64 mm	Ø 0.023 - 0.025 in
07	Ø 0.70 - 0.78 mm	Ø 0.028 - 0.031 in
08	Ø 0.80 - 0.82 mm	Ø 0.032 - 0.033 in
10	Ø 0.90 - 1.10 mm	Ø 0.036 - 0.044 in
12	Ø 1.14 - 1.27 mm	Ø 0.045 - 0.051 in
15	Ø 1.50 - 1.57 mm	Ø 0.060 - 0.063 in
16	Ø 1.60 - 1.63 mm	Ø 0.063 - 0.065 in
18	Ø 1.80 mm	Ø 0.073 in

Guide tube
GSF04X-B
GSF05X-B
GSF06X-B
GSF07X-B
GSF08X-B
GSF10X-B
GSF12X-B
GSF15X-B
GSF16X-B
GSF18X-B

	Outlet Nozzle	Nozzle	Traction Wheel	Support Wheel	Inlet Nozzle	Intern. Nozzle	Counter Wheel	Screws	Threaded Screw
WireØ									
GSF04D-B	0032512	0030913	0019479	0020345	0019520	0024954	0026693	0026695 (2x)	0026696 (3x)
GSF05D-B	0025268			0019519		0025293			
GSF06D-B	0022994			0019480	0018632	0025291	Suppl. in SF		
GSF07D-B	0025289				0019170	0024955			
GSF08D-B	0025270			0019481	0019171	0024956	0026694		
GSF10D-B	0021560				0024233	0024957			
GSF12D-B	0025272			0028367	0019171	0024958			
GSF15D-B	0025274				0024234	0024959			
GSF16D-B	0025276					0024960			
GSF18D-B	0021559								

Maintenance


Before carrying out maintenance, always allow the equipment to cool down.

- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check all cables and tubes.




- Replace a blown fuse as follows:

1. Pull off the fuse holder out and remove the worn fuse. If necessary use a tool to lever it off.

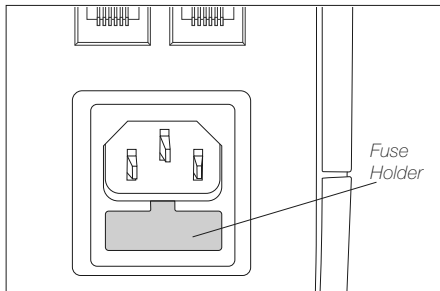

2. Insert the new fuse into the fuse holder and assemble it to the station.

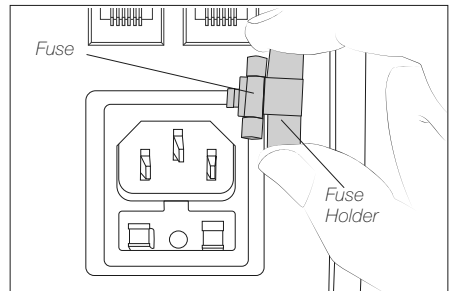

- Replace any defective or damaged parts. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause a fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip or nozzle, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also people with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

Specifications

SF

Automatic Solder-Wire Feeder Station

Ref.: **SF-110VB** 100-120V 50/60Hz. Input fuse: T0.2A.

Ref.: **SF-210VB** 230V 50/60Hz. Input fuse: T0.125A.

- | | |
|---|--|
| - Compatible Solder Reel: | Weight up to 1 kg / 2.2 lb
Diameter Max. 80 mm / 3.15 in
Height Max. 75mm / 2.95 in
Stand Axis ø 10 mm / 0.4 in |
| - Solder Wire Diameter | ø 1.0 mm / ø 0.040 in |
| - Max. Wire Length | 250 mm / 9.84 in |
| - Max. Forward Speed | 120 mm/s / 4.72 in/s |
| - Max. Reverse Speed | 120 mm/s / 4.72 in/s |
| - Ambient Operating Temp: | 10 - 50 °C / 50 - 122 °F |
| - USB Connector Station-PC | |
| - Robot Connector | |
| - Dimensions / Net Weight:
(L x W x H) | 140 x 150 x 120 mm / 2.32 kg
5.5 x 5.9 x 4.72 in / 5.11 lb |
| - Total package Dimensions / Weight:
(L X W X H) | 368 x 368 x 195 mm / 3.23 kg
14.5 x 14.5 x 7.68 in / 7.12 lb |

Complies with CE standards.
ESD safe.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labor.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:

<https://www.jbctools.com/productregistration/>

within 30 days of purchase.

If you register, you will receive e-mail notifications about new software updates for your registered product.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com